



# KOHLER PW 1000

Standalone tower or rack mount single-phase uninterruptible power supply with internal or external batteries

(1-3 kVA)

# **Technical Specification**

#### **Document Control**

ISSUE	DATE	REVISION SUMMARY
TS_700_01	13/09/2023	Rebranding to KUP International Version

#### **Useful Contacts**

#### UK

www.kohler-ups.co.uk Kohler Uninterruptible Power web site

ukservice.ups@kohler.com Service department – booking service, fault reporting etc.

uktechnicalsupport.ups@kohler.comTechnical queriesuksales.ups@kohler.comHardware sales

ukservicesales.ups@kohler.com Extended warranty agreements etc

#### **IRELAND**

www.kohler-ups.ie Kohler Uninterruptible Power web site

ieinfo.ups@kohler.com Service department, technical queries, hardware sales and extended

warranty agreements

#### **SINGAPORE**

www.kohler-ups.sg Kohler Uninterruptible Power web site

salesups.sg@kohler.com Hardware sales

serviceups.sg@kohler.com Contract customer support, maintenance contracts renewals

All product, product specifications and data are subject to change without notice to improve reliability, function, design or otherwise. Kohler Uninterruptible Power has taken every precaution to produce an accurate, complete and easy to understand specification document and will assume no responsibility nor liability for direct, indirect or accidental personal or material damage due to any misinterpretation of, or accidental errors, in this manual.

#### © 2023 Kohler Uninterruptible Power

This manual may not be copied or reproduced without written permission of Kohler Uninterruptible Power



## KOHLER PW 1000 (1-3KVA) UPS SYSTEM DESCRIPTION

By using the latest technological developments in power engineering, the KOHLER PW 1000 (1-3kVA) represents a new generation of transformerless UPS-System. Its advanced double conversion Voltage and Frequency Independent (VFI) topology responds fully to both the highest availability and environmentally friendly requirements, compliant with IEC 62040-3 (VFI-SS-111) standards.

#### KOHLER PW 1000 (1-3kVA) UPS model range

The full PW UPS range comprises models rated from 1kVA to 10kVA. This specification applies to models in the lower range, rated at 1 kVA, 2 kVA and 3 kVA only, each of which is designed as a self-contained UPS comprising a rectifier, battery charger, inverter, static switch and battery pack. All the models in this range are easy to install, and supplied with suitably terminated power cables.

The PW1000 (1-3kVA) operates as a stand-alone UPS module and can be mechanically configured as a floor-standing tower unit or installed in a standard 19 inch rack. An accessory pack which contains all the parts necessary to configure the unit for either type of installation is supplied with the UPS.

Optional external battery cabinets are available to increase the UPS autonomy time. The battery cabinet design compliments the UPS cabinet and the two cabinets can be mechanically connected together to form a single unit when installed as a tower system. Up to three external battery cabinets can be connected in tandem as part of the UPS system.

#### Advanced design features

The highlights of the KOHLER PW 1000 (1-3kVA) UPS system include its high reliability, low operating costs and excellent electrical performance.

Its key features include:

- True online technology continuously supplies your critical applications with stable, regulated, transient-free pure sine-wave AC power.
- High-Frequency Transformerless technology and tower-convertible enclosure enables the UPS to be integrated into even the
  most difficult environments with space constraints.
- User-friendly design that permits simple and trouble-free installation. All units are supplied with input and output power cables as standard.
- · Smart battery management system which extends the battery life span.
- Highly efficient PWM sine-wave technology yields excellent UPS efficiency. The high crest factor of the inverter handles peak inrush current loads and so avoids a need to upgrade to a UPS with a higher power rating.
- · Compliant with various stringent international EMC standards for electromagnetic interference & protection.
- Selection of output voltages (200/208/220/230/240) available to match the UPS to local supply specifications or specific load voltage requirements.
- A selectable bypass voltage tolerance (low/high sensitivity) restricts the range of voltages that can be applied to the load when
  the UPS operates on bypass. The ranges are ±15% (low sensitivity) and ±10%V (high sensitivity). For example, if the output
  voltage setting is 230V the bypass sensitivity Low range is 230V ±15%.
- Selectable 50Hz or 60 Hz operation.
- Fully digitized control logic for better functionality and enhanced power protection. Digital signal processing (DSP) also provides efficient communication capabilities for enhanced remote control and monitoring flexibility.
- Active power factor correction (PFC) control function constantly maintains the UPS input power factor to >0.99 at 100% load, with resulting outstanding energy efficiency.
- Wide input voltage tolerance, from 110V~300V, allows the UPS to operate normally without draining the battery unnecessarily during significant mains voltage dips, which helps extend the battery service life.
- DC-start function permits the UPS to be started during a utility power failure if required.
- Overload protection system automatically switches the UPS to bypass mode if an overload occurs and automatically switch back
  to inverter mode once the overload condition ceases. Should the output become short-circuited, the UPS puts the system in
  stand-by mode, provides visible and audible alarms, and turns off the output supply automatically until the short circuit situation is
  resolved manually.



# **GENERAL SPECIFICATION**

### **UPS Cabinet**

Model Rating		1 kVA	2 kVA	3 kVA	
Apparent output power	VA	1000	2000	3000	
Real output power (@180-300VAC, PF=0.9)	W	900	1800	2700	
Autonomy time (standard battery 100% load)	min.	5	5	4	
Autonomy time (standard battery 50% load)	min.	14	15	12	
Topology		Double conversion on-	line VFI-SS-111		
Form factor		19"-Rack / Tower			
Input:					
Voltage	VAC	Single phase, 110 - 300 VAC (@60% load) Single phase, 150 - 300 VAC (@75% load) Single phase, 180 - 300 VAC (@100% load)			
Frequency	Hz	50 or 60 Hz, ± 6 Hz			
Power factor		>0.99 at full rated linea	ır load		
Input power connection		10A IEC 320-C14	10A IEC 320-C14	16A IEC 320-C20	
Output:					
Voltage	VAC	Single phase, 230 VAC, selectable at 200/208/220/230/240 VAC 2 switched programmable outputs (setting via software)			
Switching time Inverter-Bypass (typical)	ms	4ms (typical)			
Voltage regulation	%	±1 (until low battery warning)			
Frequency	Hz	50/60 Hz, ±0.2% Unless synchronised to line			
Synchronisation window	Hz	±3 Hz or ±1 Hz (selectable)			
Voltage distortion (THD)	%	≤ 3% (linear load), ≤ 7% (non linear load)			
Overload capability (AC Mode) (Tolerance ±1%)	%	<105% Load = continuous operation, from 106%120% Load = transfer to bypass after 30 Sec. from 121%150% Load = transfer to bypass after 10 Sec >150% Load = transfer to bypass immediately Buzzer continuously alarms			
Overload capability (BATTERY Mode) (Tolerance ±1%)	%	Up to 105% Load = continuous operation, from 106%120% Load = shut down after 30 Sec. from 121%150% Load = shut down after 10 Sec >150% Load = shut down immediately Buzzer continuously alarms			
Overload capability (BYPASS Mode) (Tolerance ±1%)	%	Up to 105% Load = continuous operation, from 106%120% Load = shut down after 250 Sec. from 121%130% Load = shut down after 125 Sec. from 131%135% Load = shut down after 50 Sec. from 136%145% Load = shut down after 20 Sec. from 146%148% Load = shut down after 5 Sec. from 149%157% Load = shut down after 2 Sec. from 158%176% Load = shut down after 1 Sec. from 177%187% Load = shut down after 1 Sec. from 177%187% Load = shut down after 0.32 Sec. >188% Load = shut down after 0.16 Sec. Buzzer continuously alarms			
Short circuit handling		In normal mode: output breaker / electronic circuit In battery mode: output breaker / electronic circuit In bypass mode: input fuse			
Over-temperature (AC Mode)		Switch to bypass			
Over-temperature (On Battery Mode)		Immediate UPS shutdown			
Crest factor		3:1			



	1 kVA	2 kVA	3 kVA		
W	150	275	415		
	(3) 10A IEC 320-C13	(6) 10A IEC 320-C13	(6) 10A IEC 320-C13 (1) 16A IEC 320-C19		
%	Up to 92	Up to 92	Up to 92		
%	86	87	87		
%	97	97	97		
°C	Operating: 0°C~40°C / Storage: -10°C~50°C The battery temperature must be maintained at 20°C to ensure its lifespan is not reduced)				
m	0-200	0m up to 40°C / 3000m up	to 35°C		
%		0%90%, non-condensir	ng		
dBA		<50 dBA			
	3	6	6		
	12V / 7.2Ah	12V / 7.2Ah	12V / 9.0Ah		
VDC	36	72	72		
Mins	14, 5	15, 5	12, 4		
Α	2.1A, 3.1A	1.5A, 3.1A	1.5A, 3.1A		
Hrs	4 - 6 Hrs	4 - 6 Hrs	4- 6 Hrs		
VDC	40.95 ±1%	81.9 ±1%	81.9 ±1%		
VDC	42.3 ±1%	84.6 ±1%	84.6 ±1%		
uA	< 30uA				
Life cycle (typical)		Up to 5 years, at Max. 20°C temperature			
	EPO, RS-232				
	2nd RS-232, USB, CS141 SNMP card, Dry contact relay card				
	Windows, Linux, Mac etc				
mm	440 x 88(2U) x 405	440 x 88(2U) x 600	440 x 88(2U) x 600		
kg	18 kg	34.4 kg	39.6 kg		
	10A IEC 320-C14	10A IEC 320-C14	16A IEC 320-C20		
	(3) 10A IEC 320-C13	(6) 10A IEC 320-C13	(6) 10A IEC 320-C13 (1) 16A IEC 320-C19		
	1 x USB, 1 x RS232, 1 x 2-pole EPO/ROO Connector 1 x Interface Slot				
	External bypass External battery module(s) Output distribution 19"- rack rails (up to 1 Meter)				
perating systems Windows, Unix (and derivatives), OS/2, Novell, AppleOS					
	Windows, Unix (and de	erivatives), OS/2, Novell, A	ppleOS		
	Windows, Unix (and de	erivatives), OS/2, Novell, A	ppleOS		
	% % % %  °C  m % dBA  VDC Mins A Hrs VDC VDC uA	W 150 (3) 10A IEC 320-C13  % Up to 92 % 86 % 97  °C Operating The batt at 20°C m 0-2000 % dBA   3 12V / 7.2Ah  VDC 36 Mins 14, 5 A 2.1A, 3.1A  Hrs 4 - 6 Hrs  VDC 40.95 ±1%  VDC 42.3 ±1%  UA < 30uA  Up to 5 years, at Max.  EPO, RS-232  2nd RS-232, USB, CS-232  2nd RS-232,	W		



Model Rating	1 kVA	2 kVA	3 kVA	
Battery low	Resounds every 2.0 Se	Resounds every 2.0 Seconds		
Overload	Resounds every 3.0 Se	Resounds every 3.0 Seconds		
General error	Will sound permanently	Will sound permanently (or every 3 Seconds)		
Standards:				
Safety	IEC/EN 62040-1-1	IEC/EN 62040-1-1		
EMC-Compatibility	EN 62040-2, EN 61000	EN 62040-2, EN 61000-3-2, EN61000-3-3,		
Performance features	IEC/EN 62040-3	IEC/EN 62040-3		
Product certification	CE, UKCA	CE, UKCA		
Protection Class	IP 20	IP 20		
Manufacturing standards	ISO 9001	ISO 9001		


# **External battery cabinet**

Model Rating		230V - 1 kVA	230V - 2 kVA / 3 kVA	
Battery voltage	VDC	36	72	
Battery number & capacity	Ah	6x 12V/ 7Ah-9Ah	12x 12V/ 7Ah-9Ah	
Battery strings		2x Strings of 3 batteries	2x Strings of 6 batteries	
Dimensions (WxHxD) mm	mm	440 x 88(2U) x 405	440 x 88(2U) x 600	
Weight (Empty)	kg	4.7 kg	4.9 kg	
Weight (with 9Ah Batteries)	kg	17.3 kg	30.1 kg	
Output current (Max)	Α	50	50	
Operating environment		0~40°C / 32~104° (The battery temperature must be maintained at 20°C to ensure lifespan is not reduced) 30-90%RH non-condensing		
Storage environment		-15~45°C / 5~113°F 30-90%RH non-condensing		
Compliance		CE, UKCA		



#### **UPS CONTROL PANEL**

The front-mounted UPS Control Panel is easy to operate and comprises three areas:

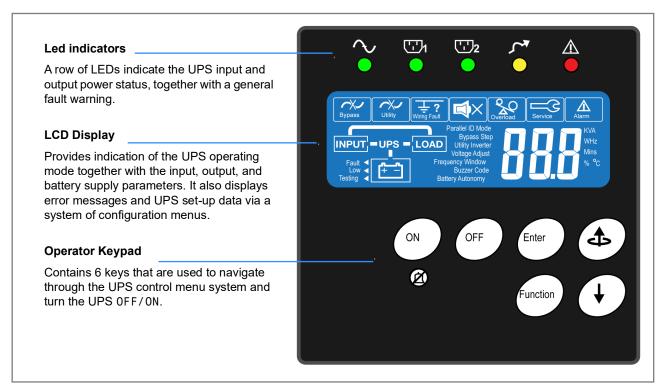

#### **LED Indicators**



#### Input mains supply status



This led is permanently ON if the mains supply is within in the normal operating range of 160~300 VAC, and flashes if the supply falls to 120~159 VAC. If the led is OFF it indicates a mains supply failure.



#### Programmable outlet status



The programmable outlets are normally connected to less critical loads which can be shed when the utility power fails. This reduces the load on the battery as it discharges and thereby increases the back-up time for the more critical loads which are connected to the unswitched UPS outlet(s). The indicators are permanently ON when the outlets are live.



#### Bypass supply status



This led is permanently ON when the UPS is operating in the ECO mode and flashes when the load is transferred to bypass – either manually or due to a detected fault.




#### **UPS** fault indication



This LED illuminates to indicate the presence of a fault condition within the UPS that needs attention. It is usually accompanied by an audible alarm.

#### **LCD Display**

The LCD display contains a row of warning symbols, a mimic diagram which indicates the power path through the UPS, a battery status indicator and a multi-function 3-digit numerical display which can be selected to indicate a range of operating parameters. Each of these areas are described below.

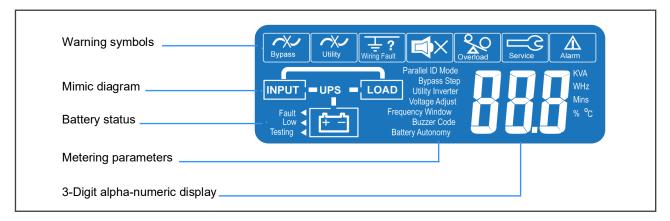

#### Warning symbols



#### Bypass input abnormal:

UPS fails to transfer to bypass, bypass abnormal in ECO mode



#### **Utility input abnormal:**

The utility mains supply is outside the UPS pre-set operating window



#### Wiring fault:

Site wiring problem such as reversed Line-Neutral connection



#### Alarm buzzer silent

The alarm buzzer has been silenced or disabled



#### Overload:

The UPS output is overloaded



#### Service:

The UPS is operating in its service mode



#### Alarm:

An alarm condition is present. This remains active after the audible alarm is reset if the alarm still exists.

#### **Meter Display**

When the UPS is turned on, you can scroll through the measurement display screens using the UP and DOWN keys on the operator keypad. The parameter display sequence is as numbered in the table below and loops around in either direction.

1 Utility Voltage (V) 4 Inverter Frequency (Hz) 7 Battery Voltage (V)
2 Utility Frequency (Hz) 5 Inverter Load % 8 Battery Autonomy (mins.)
3 Inverter voltage (V) 6 Inverter Load (A) 9 UPS Temperature (°C)



#### **COMMUNICATION OPTIONS**

The UPS has several provisions for communicating with external devices and systems, including:


- · External Emergency Power Off (EPO).
- RS-232 and USB ports to provide communication with monitoring software installed on a remote PC.
- · Optional card slot that can be used with:
  - an intelligent CS141 card for local or area network UPS monitoring and control OR
  - a Dry Contact relay card to provide volt-free signalling that can be integrated into an external alarm monitoring or building management system.

All communication ports, including the optional cards, can be active and used simultaneously to monitor the UPS status; however, only one communication interface at a time can control the UPS. This is determined on a priority basis, with the higher priority interface gaining control.

The interface control priorities are as follows:

- · EPO input port
- · Optional interface card
- · Optional USB
- · Optional RS-232


#### **Emergency Power Off (EPO)**

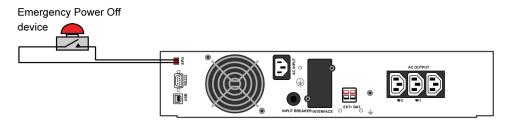

The Emergency Power Off (EPO) option allows you to turn off the UPS using an external switch or contact that is wired to the EPO terminal block on the back of the UPS. The external circuit consists of a 'normally open' external contact that will power-off the UPS when the contact is closed. The connection should be made using a screened, single pair cable (0.5mm²) with a maximum length of 100 metres.

When the EPO circuit is activated the UPS output will turn off, removing power to the load, but the battery charger will remain operational to maintain battery charging. An EPO alarm is shown on the LCD display but you can still scroll through and monitor the UPS input, battery and output metering.

#### **RS-232 Computer serial interface**

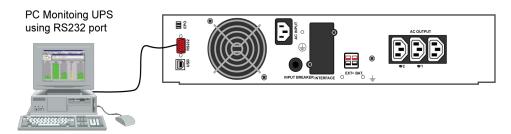


Note: The USB port is connected in parallel with RS-232 port and outputs the same data stream.

When used in conjunction with suitable software, the RS-232 and USB ports allow the connected PC to continuously monitor the input mains voltage and UPS status, and display appropriate operating data and messages.



The RS-232 connector is a 9-pin female D-type and can be connected to a PC using standard serial cable. The maximum permitted RS-232 cable length is 15 metres.

#### CS141 /SMNP adapters

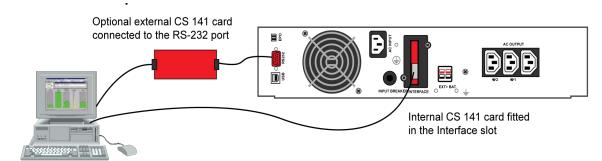

Simple Network Management Protocol (SNMP) is a world-wide, standardised communication protocol that can be used to monitor any network-connected device via a simple control language and display the results in a browser-based application. The software agent built in to the CS141 adapter card makes the UPS data available in this SNMP format which can then be utilized by a number of UPS management software applications.

The card contains a serial interface, which can be connected directly to a computer's serial port, and an RJ-45 connector which allows it to be connected to a network using a standard CAT-5 cable. The SNMP adapter can be configured via Telnet, http (browser) or serial connection. For normal operation, at least one Ethernet network connection is necessary.

Once installed, the UPS-Management software agent, which is already installed in the card, monitors the UPS operation and outputs its data in SNMP format to the connected network. The card enables automated generation of event/alarm emails, server controlled shut down (with optional licenses) and other tasks, and can also be integrated with BMS software over a local area network (LAN) for SNMP or Modbus information over IP. Kohler Uninterruptible Power offer monitoring software with SNMP functionality for Novell, OS/2, and Windows that run both on INTEL and on ALPHA, DEC VMS and Apple.

An optional external SNMP adapter can be connected to the UPS via its RS232 port if the UPS card slot is in use (e.g. DCE card fitted) but SNMP facilities are still required.

#### **RCCMD**

RCCMD (Remote Console Command Module) for 'multi-server shut down' is an independent software module intended for transmitting and receiving 'remote commands'. Using the 'RCCMD send' function, the SNMP adapter can send status messages to connected users or initiate automatic shut down throughout the whole network. Our CS141 SNMP adapters are fully compatible with RCCMD.




#### AS400 (dry contact) card

The DCE dry contact card provides volt-free signalling outputs that can be integrated into an external alarm monitoring panel or building management system.

All the output connections at pins 1-7 are switched by relays whose pole contacts are connected to terminal 8 (common). This illustration shows an example of the INVERTER ON relay. Note that all the outputs to terminals 1-7 are link-selectable to be either short-circuit or open-circuit to the common Pin 8 when the monitored parameter is 'active'. Details for configuring the links are provided in the documentation that accompanies the card.

Terminals 9 an 10 are inputs that can be used to shut down the UPS when en external voltage of 6-25VDC is applied, as shown.

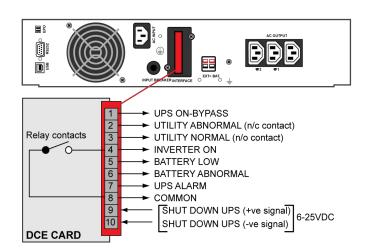

#### INSTALLATION PLANNING

The following *guidelines* should be taken into account when planning a suitable location and environment for the KOHLER PW 1000 (1-3kVA) UPS installation.

#### Choosing a suitable installation location

#### **Environment considerations summary:**


- · Avoid high ambient temperature, moisture and humidity:
  - temperature should be between 0°~40°C.
  - the battery temperature must be maintained at 20°C to ensure its lifespan is not reduced
  - humidity should be less than 90% non-condensing
- · An adequate cooling air flow must be available if necessary to sustain a suitable temperature
- · Ensure no dust or corrosive/explosive gasses are present.

#### Location considerations summary:

- · The UPS is not designed for outdoor use
- · The installation location must be vibration free, clean, dry and free of excessive dust
- · If the UPS system is installed as a Tower system, the supporting surface should be non-flammable
- · The UPS must not be installed in a corrosive environment or in the vicinity of flammable items
- · Local fire protection standards must be respected
- The ventilation grills at the front of the UPS and extractor fans at the rear of the UPS must not be obstructed at any time
- · The UPS power supplies must be readily available
- The UPS equipment must be installed with the clearances illustrated below. If it is to be installed as a Tower system the connected cables must be of an adequate length to allow the UPS to me manoeuvred for maintenance access if necessary, as shown.

#### Clearances

#### **Tower installation**

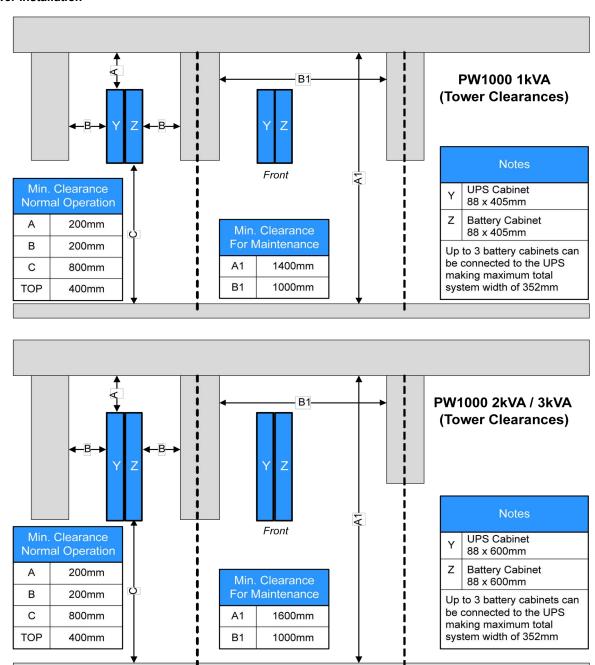


The total width of the system hardware can range from 88mm, for a stand-alone UPS cabinet, up to 352mm where the maximum of three (optional) battery cabinets are attached to the UPS cabinet – only one battery cabinet shown in the diagram above.

The left hand diagrams show the 'operating' clearances necessary to provide adequate cooling. For maintenance, at least 800mm side access is required and, where necessary, the cables connected to the UPS should be made sufficiently long to allow the UPS to manoeuvred to a position where the clearances shown in the right hand diagrams are obtainable.



#### **Rack mounting**

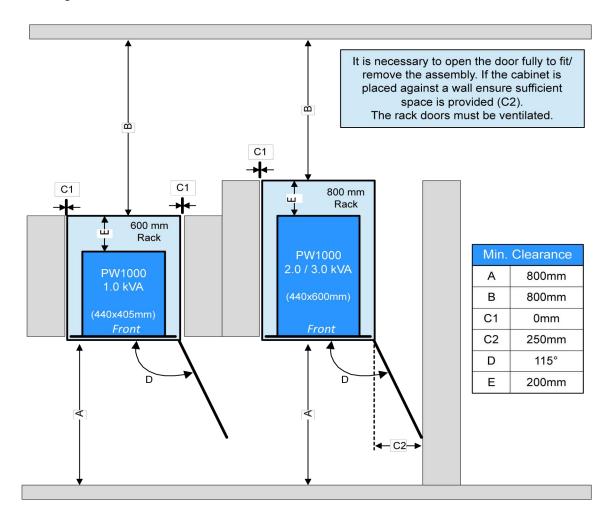

When the UPS is rack-mounted, a minimum of 200mm should be available between the rear of the UPS and the back of the rack cabinet to enable adequate ventilation and provide space for cabling. It is permissible to install the PW1000 1kVA model in a cabinet with a depth of 600mm, although this will only provide 195mm rear clearance rather than the desired 200mm shown in the above diagram.

The rack cabinet must have a ventilated door and a minimum clearance of 800mm must be provided at the front and rear of the cabinet to allow full UPS access for installation and maintenance.